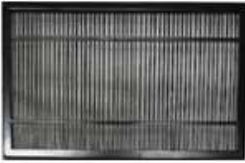
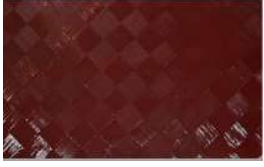


1 正角30		2 丸12		3 正角28	
4 正角15		5 正角15		6 丸12	
7 正角15		8 丸12		9 正角15	
10 正角10		11 正角15		12 丸13	
13 正角28		14 丸18		15 正角28	
16 長角28		17 半月10		18 半月10	
19 長角10		20 半月10		21 半月10	
22 楕円6		23 楕円10		24 楕円6	

25 楕円6		26 楕円両面 10		27 丸20	
28 楕円両面 10		29 楕円6		30 半月4	
31 長角10		32 扇子両面 20		33 5 8 は小 長角15	
34 長角10		35 長角18		36 長角28	
37 長角10		38 長角両面 18		39 長角10	
40 長角10		41 正角28		42 正角28	
43 長角10		44 長角両面 18		45 長角8	
46 長角18		47 長角18		48 正角10	

49 長角10		50 長角10		51 菱形15	
52 長角15		53 長角12		54 51より小 菱形12	
55 長角35		56 長角6		57 長角6	
58 33は大 長角12		59 長角12		60 花台40	
61 花台50		62 花台50		63 丸50	
64 丸50		65 丸50		66 丸50	
67 丸40		68 丸40		69 丸20	